




# Quick Start Guide



Quick Start Guide for Mobile Scanner- Flip-Pal™ 100C


## 1 Introduction

### Scanner Top (scanning side)

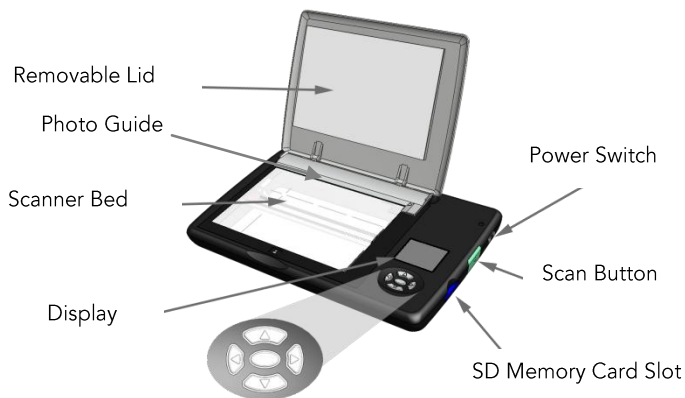

UP, DOWN, RIGHT, LEFT ARROW Buttons  
OK Button (center)

### Scanner Bottom (viewing side)

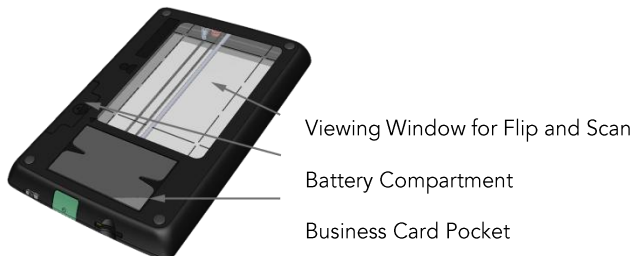

## 2 What's In the Box?

- Flip-Pal™ Model 100C Mobile Scanner
  - Four AA batteries (installed)
  - 2GB SD memory card (installed) which stores your scans and contains the Flip-Pal™ Software
- SD Memory Card to USB adaptor
- Quick Start Guide

## 3 Set Up

### Activate the Batteries



Press gently on battery door while pulling tab sideways to remove

### Power on the Scanner




Slide power switch toward rear, hold until the display lights up, then release

### Apply Window Protector Sheet (optional)

The Window Protector Sheet goes ONLY on the bottom viewing window, not on the top scanner bed. See its installation sheet for detailed instructions.


### Set Date and Time

At initial power up or battery change, you will see this screen.

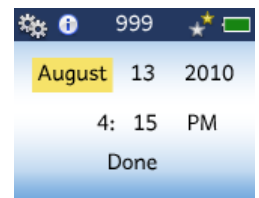

Use UP ARROW and DOWN ARROW to change the value of each field. Use LEFT ARROW and RIGHT ARROW to scroll to each of the fields in turn, beginning with Month and ending with AM/PM. When you are satisfied with all settings, move the cursor to Done and press OK. **Note:** If you press the green scan button when you first see this screen, you can skip the date and time setting process. Your scans will have factory-set time and date.

## Standard Scanning

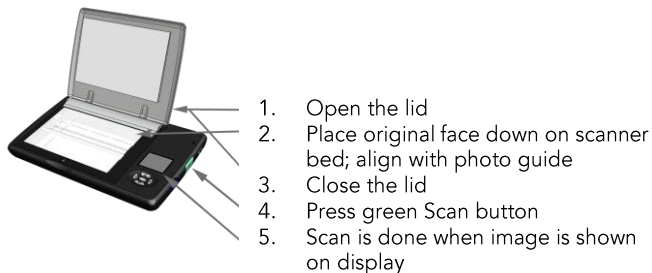

## Flip and Scan (scan photo albums & large originals)



1. Remove lid: Pull up on small tabs at ends of Photo Guide
2. Flip scanner over onto original
3. Align by looking through the viewing window
4. Press green Scan button

For scanning **larger originals**, see instructions under Help/Manuals in the Flip-Pal™ Software on the SD memory card.


## 5 Screens

### Review Screen

To access the Review Screen press OK. You see the most-recently scanned image. Use LEFT and RIGHT ARROW to scroll through scans.



### Home Screen

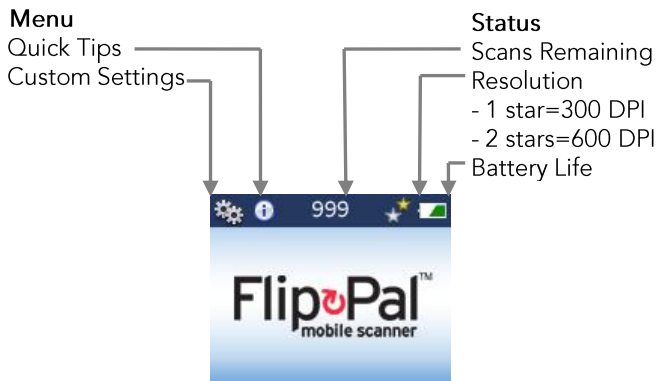

To access helpful Quick Tips or Custom Settings, press UP ARROW then use the ARROW buttons to navigate and OK button to select. See the User's Guide for more information on Custom Settings.

Scans are stored on the SD memory card the same as digital camera images. To use scans, power off the scanner. To remove the SD memory card from the scanner, push it in gently; it springs out, then remove it. Insert it into your computer. If your computer does not have an SD card slot, use the supplied SD card to USB adaptor, connecting it to a USB slot on your computer.

Launch **Flip-Pal™ Software** right from the SD memory card. Find the Flip-Pal™ drive location. Windows users look for Toolbox.exe; Mac users look for the Mac folder. **Be sure you have the latest version – see [www.flip-pal.com](http://www.flip-pal.com) for more information.** You can use it to:

- View or print the Flip-Pal™ documentation
- Stitch scans together for larger originals
- Transfer scans to your computer for use and backup
- Upload scans to your Facebook account
- Order prints from LifePics
- Delete scans from the SD memory card
- Restore color on old photos
- Access [www.flip-pal.com](http://www.flip-pal.com) and customer support

## 7 For More Information

The Flip-Pal™ User's Guide has more- information on these and other topics. You can view or print the User's Guide from Flip-Pal™ Software on the SD memory card or from [www.flip-pal.com](http://www.flip-pal.com), along with technical support, Frequently Asked Questions, creative ideas, accessories, and more.

### Register Your Scanner


Please visit [www.flip-pal.com](http://www.flip-pal.com) to register your new Flip-Pal™ Mobile Scanner. When you register, you will be eligible to receive free technical support for one year from date of purchase.

### Legal and notice information

© Copyright 2011 Couragent, Inc. Rev 2-0

The information in this manual is subject to change without notice.

Limited One-Year Warranty. The only warranty for this product is set forth in the express warranty statement found in the User's Guide or [www.flip-pal.com](http://www.flip-pal.com). Nothing in this manual should be construed as constituting an additional warranty. Couragent, Inc. shall not be liable for technical or editorial errors or omissions contained herein.

- "FLIP-PAL™" and the Flip-Pal™ logo are trademarks of Couragent, Inc.
- Windows® is a U.S. registered trademark of Microsoft Corporation.
-  SD Logo is a trademark of SD-3C, LLC.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.