



## How to Create a StoryScans™ Talking Image using the Flip-Pal ScanTools app

Follow the instructions on the Quick Start Card to install the Wireless Upgrade and EyeFi Mobi app. Make sure the scans are uploading to the camera roll.

Install the ScanTools app from iTunes or Google Play and open it.



### Gallery

Tap **+** to add scans from the camera roll to the StoryScans Gallery


Tap the thumbnail of the scan to highlight it.

Tap **Delete** to delete that scan.

Tap **Play** to play the file (if it is a video)

Tap **Share** to share it using email, Facebook, message, Twitter.

Tap **Select** to use the tools edit it or record your voice and create a StoryScan talking image.

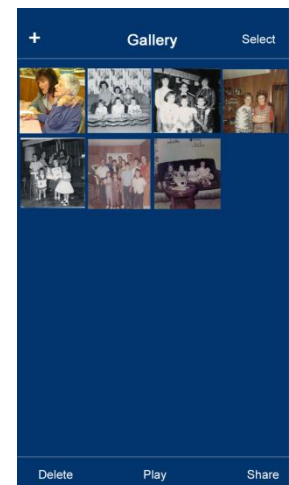


### Tools

Tap **Rotate** to rotate the scan

Tap **Crop** to crop the scan.

Tap **Record** to record the audio for the talking image.

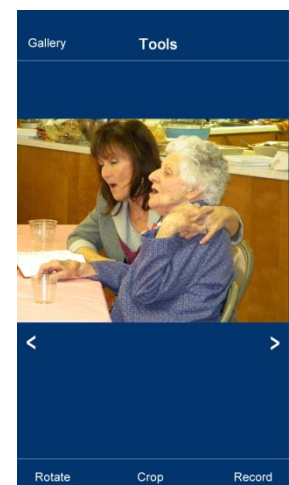

## Record

Tap **Record** and start talking into the mobile device's microphone. The counter will increment.

Tap **Pause** to pause recording.

Tap **Resume** to continue from where you paused. Tap Done

Tap **End** when done recording.




## Recording Done

Tap **Listen** to listen to the recording.

Tap **Re-record** to record from the start.


Click **Save** to create and save the talking image.

This may take a minute or so.

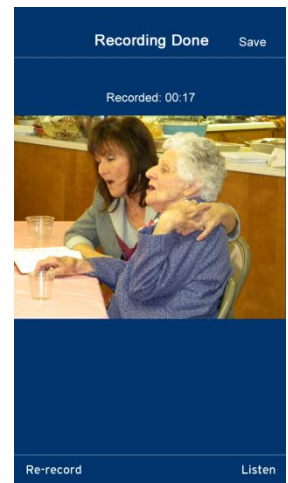

## Movie Saved

The talking image movie file is saved in the Gallery

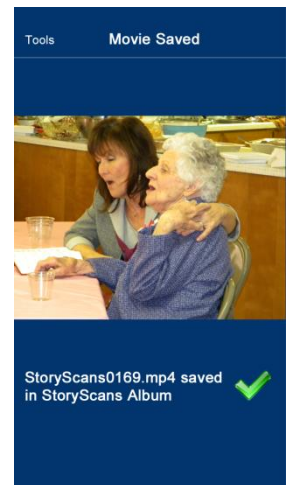

Tap **Gallery** to play, delete, or share the newly-created file.

Also, to select the next scan.